


Round rail installation instruction

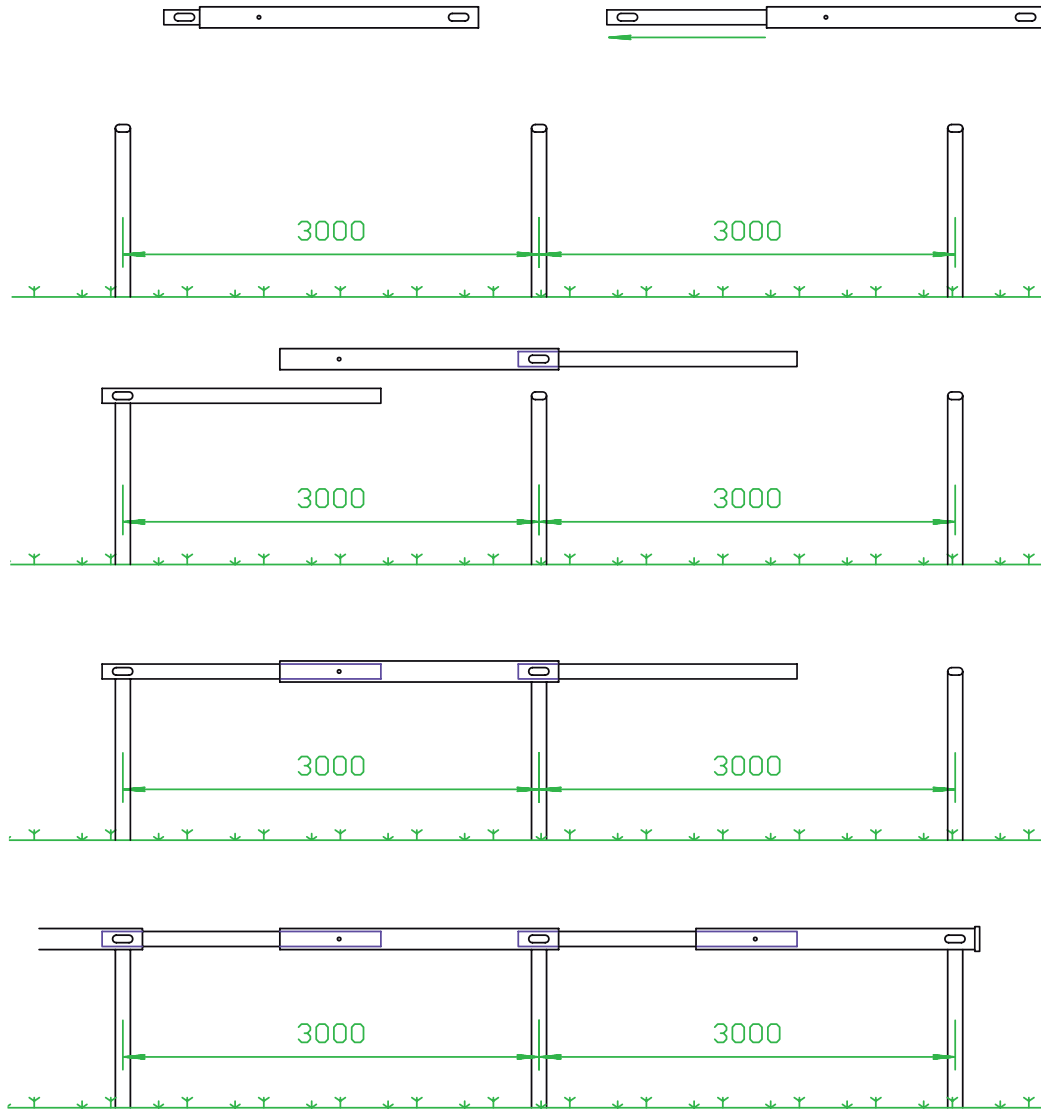

1. Unpack and lay out rails.
2. Position swan-necks or 45 degree posts at approx 3 metre gaps.
3. Separate one pair of rails and position on post as shown. Slide apart second pair of rails until mortise holes line up.
4. Slide end of second pair of rails over first rail and locate mortise hole onto post. Continue to install round rails using this method until the last post is reached.
5. Using the unused half of the first pair of rails, slide rail over previous rails and locate mortise hole onto post. Cap off with end caps.