

# Installation of lifting barrier

Oval and round


SIZE  
Posts 108 x 50, Rails 108 x 50

PART NO.  
G13

PAGE NO.  
132

© PROTECTED BY PATENT  
Nov 2005 G.B.

**DURALOCK**  
PERFORMANCE FENCING

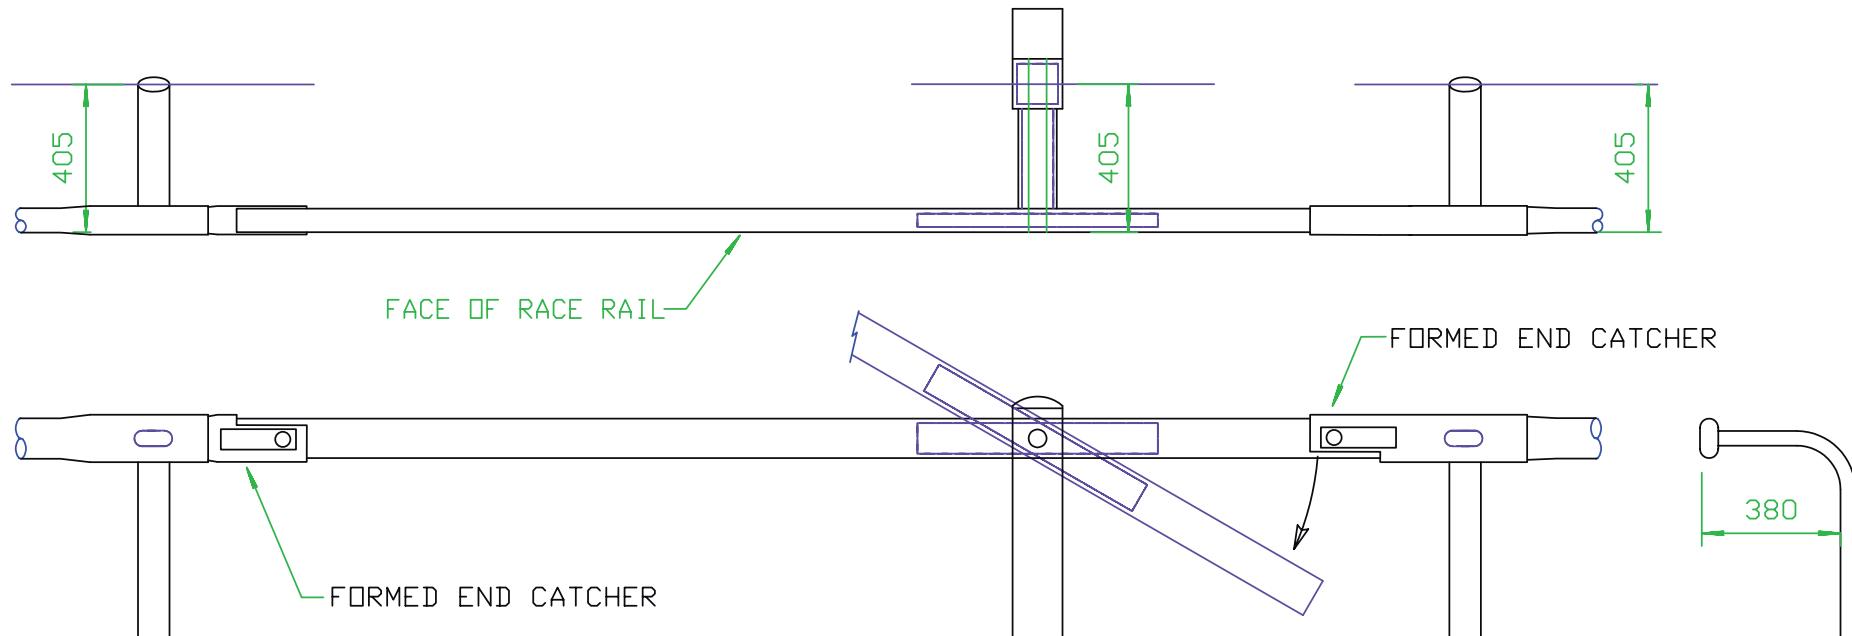

1. Lay out all parts of Race Rail Lifting Barrier along Race Rail line.
2. Marking out. Bore hole for main post – minimum of 250mm diam. x 1m deep – fill with concrete and set post assembly into concrete. Check height and level.
3. Position left-hand and right-hand swan-neck putlocks and drive into ground. Assemble running-rail and receiving ends onto swan-neck posts. Adjust height and level to suit lifting barrier.
4. (Counter-balance weight pre-fitted by Duralock.)

**Note.**

Establish position of lifting barrier first, then install running-rail, making adjustments to running-rail to suit distance between next posts.